



User Recommendations for 009LS Cutter Detonators

DET-3050-009LS

MAN-DET-009LS (R02)

OWEN OIL TOOLS

12001 Cr 1000
Godley, Texas, 76044, USA
Phone: +1 (817) 551-0540
Fax: +1 (817) 551-1674
www.corelab.com/owen

Warning: use of owen equipment contrary to manufacturer's specifications or operating instructions may result in property damage, serious injury or fatality. If you are not trained in the handling and use of explosive devices, do not attempt to use or assemble any owen perforating systems or owen firing devices.

This technology is regulated by and, if exported, was exported from the united states in accordance with the export administration regulations (EAR). Diversion contrary to U.S. Law is prohibited. Export and/or re-export of this technology may require issuance of a license by the bureau of industry and security (BIS), U.S. Department of Commerce. Consult the BIS, the EAR, and/or Owen Compliance Services, Inc. To determine licensing requirements for export or re-export of this technology.

This document contains confidential information of Owen Oil Tools LP (Owen) and is furnished to the customer for information purposes only. This document must not be reproduced in any way whatsoever, in part or in whole, or distributed outside the customer organization, without first obtaining the express written authorization of owen. This document is the property of owen and returnable upon request of Owen.



Warning: *Explosives are destructive by nature! Do not attempt to disassemble or alter the detonator in any manner! Do not crush, hammer, pinch, impact, pull wires or abuse the detonator or any explosive!*



Warning: *Be sure to follow safe operating practices as found in API RP-67 in accordance with governmental regulations, company policies and manufacturer's recommendations!*

Owen Oil Tools' Resistorized Bridge Detonators are designed to detonate when an electrical current greater than 0.2 amps is applied. The 009LS Cutter Detonator is a resistorized electrical detonator manufactured to API RP-67 recommendations and employs a 51 ohm resistor in the firing circuit. It is designed to be used in pipe recovery tool such as tubing cutters, casing cutters, and split shot cutters where the detonator has a directional output designed to initiate another explosive device. The -009LS detonator is intended to be used in operating conditions less than 475 degrees F for 1 hour. The user should satisfy themselves, as to the suitability of this product for the user's application.

1.0 Procedures for Panel Setup and Firing Resistorized Bridge Detonators

1.1 Before attaching a gun or detonator to the wireline cable:

- Short circuit the toolstring below the CCL.
- Apply DC voltage and adjust the rheostat to achieve 1.0 amp.
- Mark the rheostat location, then return the rheostat to zero.

1.2 When ready to fire a gun or detonator downhole, increase the power to the firing circuit from 0 to the 1.0 amp rheostat position over 4-6 seconds until the detonator fires.



Note: *If an alternative firing technique is used, do not surge the firing circuit with power as it may cause the detonator to fail and a mis-run to occur.*

2.0 Arming



Warning: *Detonators should be removed from their packaging and storage in the loading/arming area at the time of arming! Always insert the detonator inside a safety tube after removal from packaging and storage!*



Note: *An electrical check of the detonator's firing circuit may be conducted while the detonator is confined within a safety tube. Using electrical detonator circuit testing instruments, Owen's 51 Ohm Resistorized Bridge Detonators will measure a resistance of 51 Ohms \pm 5%.*

- 2.1 After removing the detonator from the packaging, insert the wires of the shunted detonator through the male end of the shock sub extension mandrel. Install the detonator over the male end of the button-style contact sub. Insert the detonator, output end first, into the cutter top sub until the output end of the detonator is flush with the bottom of the cutter top sub. The cutter top sub should be mechanically attached to the open-bore shock sub extension mandrel. Install the cutter body (without explosive components) onto the cutter top sub. With the cutter body attached to the top sub, the shunted wires may be disconnected and attached to a tear drop contact sub. The tear drop contact sub should be attached to the open-bore shock sub extension mandrel taking care not to force, pinch, crush, or impact the explosive components or electrical wiring.



Note: *Refer to Owen's Split Shot Cutter Assembly Manual (MAN-REC-SSC) for more information on the proper use and installation of the 009LS detonator.*

